



1250 Distribution Way, Vista CA 92081
 Phone: 760-734-1749 Fax: 760-874-2973

	PRODUCT NUMBER H2-EXT-652
--	-------------------------------------

HOOD LATCH INSTRUCTION MANUAL

Congratulations on the purchase of your new accessory by Predator Motorsports. As with all products, proper installation is the key to obtaining all of the benefits your accessory is capable of delivering. Please take a few minutes to read through the instructions to identify the components and learn where and how they are used. It is a good idea to start by comparing the parts in your kit with the parts list below. Be sure to take all applicable safety precautions during the installation of this product.




<u>Parts List</u>	<u>Quantity</u>	<u>Tools Required</u>	
Instructions	1	• 10mm wrench	• Metric Allen Head Set
Hood Latch Mount (small)	2	• 1/4" Drive Extension	
Hood Latch (large)	2	• Mild Soap	
M10x40 SS Set Screws	4		

INSTRUCTIONS

Removal Procedure

1. Open Hood.
2. Remove the two fasteners retaining the hood bumper and latch.
3. Remove the upper hood latch (1) from hood.

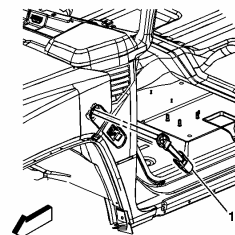

Transferring Parts Procedure

1. Press pins in using 1/4 inch drive extension, and remove rubber strap, then install into upper and lower billet latches. Note: Windex or soap will aid in removing and reinstalling pin into the rubber strap.



Installation Procedure

1. Install Set Screws into Hood Latch Mount.
2. Align the side hood bumper and upper hood latch to hood.
3. Tighten fasteners that retain side hood bumper and upper latch to 7 ftlbs.

