




**PRODUCT NUMBER**  
**H1-EXT-196**

## 6.6L UNDER CARRIAGE INSTRUCTION MANUAL

***Congratulations*** on the purchase of your new accessory by Predator. As with all products, proper installation is the key to obtaining all of the benefits your accessory is capable of delivering. Please take a few minutes to read through the instructions to identify the components and learn where and how they are used. It is a good idea to start by comparing the parts in your kit with the parts list below. Be sure to take all applicable safety precautions during the installation of this product.

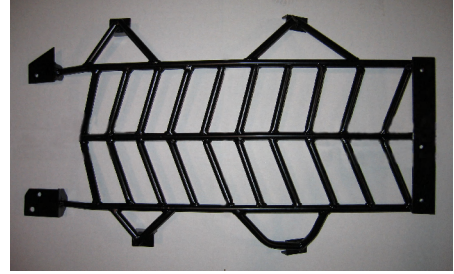

<b>Parts List</b>	<b>Quantity</b>	<b>Tools Required</b>
Under Carriage Protection	1	• 2- ½" Wrenches
Rubber Pad	1	• Scissors
3/8" x2" bolt	3	
3/8" x3.5" bolt	3	
3/8" Washer	12	
3/8" Nylock Nut	6	

### Installation Process

#### Step 1.

Remove the two outer bolts located on the rear mounts of the middle stock under carriage protection.

#### Step 2.

Remove the two outer bolts on the front of the rear under carriage protection.

#### Step 3.

Set rubber pads onto the outside four angle brackets.

Note: It will be necessary to cut the pad for a perfect fit.

#### Step4.

Carefully lift under carriage into location and install the supplied shorter bolts in the front two mounts and the supplied longer bolts in the rear mounts. Tighten to 80ft/lbs.

