



1250 Distribution Way, Vista Ca 92081  
Phone: 760-734-1749 Fax: 760-874-2973

# H1 LIFT KIT INSTRUCTIONS

## Product Information:

Thank you for your recent purchase of our 2" Lift Kit. You own one of the most advanced designed Performance Lift Kits ever made for an H1 Hummer.

**IMPORTANT:** To ensure proper function and safety, you **MUST** have the lift installed by a trained profesional. After 500 miles you **MUST** return to the installation facility for them to re-torg all bolts. Failure to do so will void warranty and possibly cause injury. Predator Motorsports will not be liable for misuse and or neglect.


## Warranty Information:

Your Hummer H1 Lift Kit is backed by a Lifetime Warranty on all structural parts including all spacers and brackets under normal use. Misuse such as a roll-over, rally racing and other similar use will not be covered under warranty. All hardware is backed by our 3 year 36,000 mile warranty.

The Powder Coated finish is backed by our 3 year 36,000 mile warranty. Care must be taken for the powder coated finish and should be treated similar to your vehicle paint finish to ensure a lifetime of trouble-free use. We recommend a monthly coat of high grade carnauba wax to ensure a beautiful finish for years to come.

## Item List:

- 6- 2" Body Lift Spacer Blocks
- 2- 4' Rear Block Out Bar (Long black Aluminum Pieces)
- 2- Outer Block Out Bar Support Mounts (1- left hand piece and 1- right hand piece)
- 2- Inner Block Out Bar Support Mounts
- 1- Center Block Out Connector Bracket (4" aluminum piece w/4 holes)
- 2- Hood Lift Spacer Blocks
- 5- 7" Grade 8 Body Lift Bolts (5/8"x7")
- 1- 6.5" Grade 8 Body Lift Bolt (5/8"x6.5")
- 4- 3 1/2" Hood Lift Bolts (3/8"x3.5")
- 4- 3/8" Nylock Nuts for Hood Lift Bolts
- 4- 3/8" Washers for Hood Lift Bolts
- 6- Nylock Nuts for Lift Block Bolts (5/8")
- 1- Long Fuel Tank Spacer Block
- 1- Short Fuel Tank Spacer Block
- 1- Front Fuel Tank Strap Extender Strap
- 3- Fuel Tank Strap Extension Tubes (.75" x 2" Tube)
- 3- Fuel Tank Strap Extension Bolts/Nuts (3/8"x3" bolts/nuts)
- 3- 3/8" Nylock Nuts for Extension Bolts
- 6- 3/8" Washer for Extension Bolts
- 4- D-Ring Lifter coupler
- 2- D-Ring Lifter, Spacer Stop
- 12- 3/8"x1" Bolts used for Block Out Bar
- 12- 3/8" Nylock Nuts for Block Out Bar
- 24- Washers for Block Out Bar
- 4- 1/4"-20 x 1" Bolt for Block Out Bar Outer Mounts
- 4- 1/4" USS Washer for Block Out Bar Outer Mounts

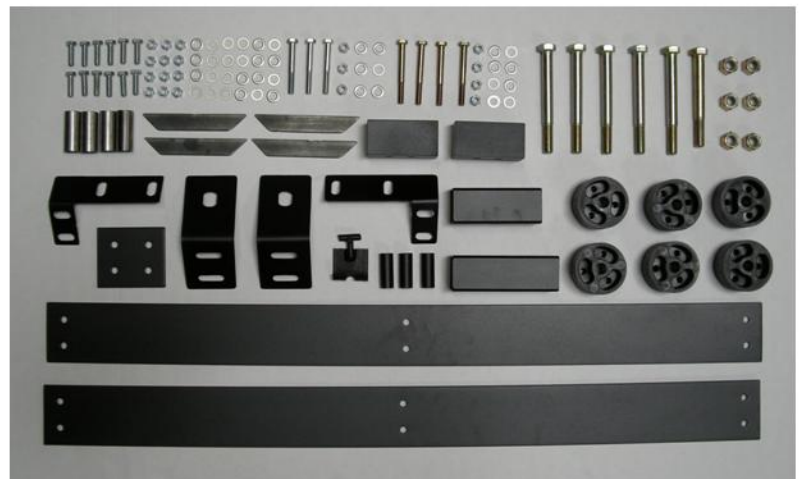

## Tools Needed for installation:

- Standard Socket and Wrench Set
- Ply Bar
- Vehicle Hoist recommended at 10,000 Pounds
- Floor Jack
- Rubber Mallet